

HSUP: Room transducer for relative humidity

How energy efficiency is improved

Accurate recording of air humidity in pneumatic installations for optimal control of HVAC systems.

Areas of application

Continuous measurement and/or control of relative humidity in combination with pneumatic control equipment (Centair), e.g. in rooms.

Features

- Part of the Centair family of systems
- Conversion of relative humidity into a standard 0.2 to 1.0 bar pneumatic signal
- Lid in thermoplastic with grey/white frame (RAL 9002) and pure-white front panel (RAL 9010)
- Compressed-air connection on plug nipple for flexible plastic hose int. ø 4 mm
- Complies with directive 97/23/EC Art. 3.3 on pressure equipment

Technical description

- Supply pressure 1.3 bar ± 0.1
- Nozzle/ball system
- Linearity of output signal <2%

Type Meas	uring range %rh	Output pressure bar	Weight kg
HSUP 1 F001	2090	0,21,0	0,17
Supply pressure 1)		Effect of temperature	-0,5 %rh/K
(via ext. restrictor of ø0,2 mm) Air capacity, air consumption	1,3 ± 0,1 bar 33 l _n /h	Permissible ambient temp.	1040 °C
Max. hysteresis	5 %rh	Connection diagram	A02782
Linearity	see characteristic	Dimension drawing	M303048
Time constant (0,2 m/s)	approx. 10 min	Fitting instructions	MV 2427

Accessories

0296218 000* Buckle-proof adaptor for push-on connection

0296990 000* Buckle-proof adaptor for screw-on connection, MV 7322

0303124 000* Recessed junction box

0310315 000* Surface junction box

Dimension drawing or wiring diagram are available under the same number

1) In the RCP and RPP 20 controllers, the restrictors (ø0.2 mm) are fitted at inputs 3 and 4. See Section 60 on regulations concerning the quality of supply air, especially at low ambient temperatures.

Operation


As the humidity increases, the nylon band expands, thereby creating a stroke on the lever system. This stroke is converted by the conversion spring into a force. The bleed-off nozzle-ball system converts this force into an equivalent pressure change. As the humidity increases, the output pressure rises.

Engineering and fitting notes

The effect of temperature can easily be negated by making the necessary adjustment of the hexagonal screw at the end of the lever. Since the measuring span is unaffected by either fitting or use, the tension of the spring converter should not be altered.






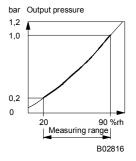

Technical information


Technical manual: centair system 304991 003


Output pressure as a function of the relative humidity at 23 °C

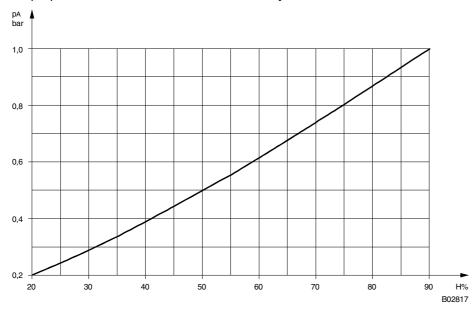

Connection diagram

Dimension drawing

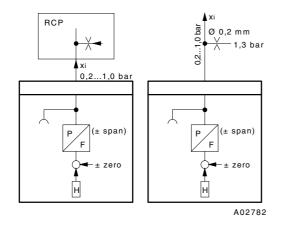

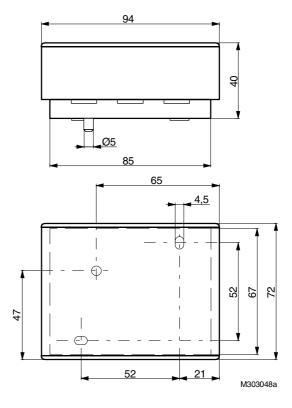

Accessories

